





# TERMINAL DE LATÓN



	Sección mm <sup>2</sup>	 mm		
Latón	0,5 - 1	2,8	100	<b>TL-H-2800</b>
	0,5 - 1	4,8	100	<b>TL-H-4800</b>
	0,5 - 1	6,3	100	<b>TL-H-6200</b>
	1,0 - 2,5	6,3	100	<b>TL-H-6300</b>
	4,0 - 6,0	6,3	100	<b>TL-H-6400</b>
	0,2 - 4,0	9,5	100	<b>TL-H-9500</b>



Latón	0,5 - 1	2,8	100	<b>TL-M-2800</b>
	0,5 - 1	4,8	100	<b>TL-M-4800</b>
	1,0 - 2,5	6,3	100	<b>TL-M-6300</b>



Latón	1,0 - 2,5	6,3	100	<b>TL-HR-6300</b>
	2,5 - 4,0	6,3	100	<b>TL-HR-6400</b>



Latón	1,0 - 2,5	6,3	100	<b>TL-MR-6300</b>
-------	-----------	-----	-----	-------------------



Latón	1,0 - 2,5	6,3	100	<b>TL-MH-6300</b>
-------	-----------	-----	-----	-------------------



Latón	1,0 - 2,5	6,3	100	<b>TL-B-6300</b>
	1,0 - 2,5	8	100	<b>TL-B-8200</b>



Latón	0,5 - 2,5	3,2	100	<b>TL-R-3200</b>
	0,5 - 2,5	4,2	100	<b>TL-R-4200</b>
	0,5 - 2,5	5,2	100	<b>TL-R-5200</b>
	0,5 - 2,5	6,2	100	<b>TL-R-6200</b>
	1,5 - 4,0	6,2	100	<b>TL-R-6300</b>
	1,5 - 4,0	7,2	100	<b>TL-R-7200</b>
	1,5 - 4,0	8,2	100	<b>TL-R-8200</b>
	0,5 - 1	10	100	<b>TL-R-10000</b>
	2,5 - 6,0	10	100	<b>TL-R-10100</b>



Latón	0,5 - 1,0	4,2	100	<b>TL-HO-4200</b>
	0,5 - 1,0	5,2	100	<b>TL-HO-5200</b>



Latón	1,0 - 2,5	4	100	<b>TL-CLH-4000</b>
-------	-----------	---	-----	--------------------



Latón	1,0 - 2,5	4	100	<b>TL-CLM-4000</b>
-------	-----------	---	-----	--------------------